

2019 Audi Maintenance Schedule - All Models

MY 2019 Maintenance Intervals - Canada

This applies to the all gas and hybrid models

Service intervals in kilometres												
	15km	30km	45km	60km	75km	90km	105km	120km	135km	150km	165km	180km
Standard Maintenance (Every 1 year) ¹	X		X		X		X		X		X	
Major Maintenance (Every 2 years) ²		X		X		X		X		X		X
Additional Maintenance Items	Refer to the Additional Maintenance Items Table below											

1) First standard maintenance service at 15,000 km or 1 year after delivery, whichever occurs first. Standard maintenance services thereafter occur at intervals of 30,000 km or every 2 years after the last standard maintenance service, whichever occurs first.

2) First major maintenance service at 30,000 km or 2 years after delivery, whichever occurs first. Major maintenance services thereafter occur at intervals of 30,000 km or every 2 years after the last major maintenance service, whichever occurs first.

NOTE: The intervals shown in this table are based on vehicles operating under normal conditions. In case of severe conditions, such as extremely low temperatures, excessive dust, etc., it is necessary for certain operations to be carried out in between the given intervals. This applies particularly to engine oil changes and the cleaning or replacing of the air cleaner filter element.

Check all completed items

Standard Maintenance

- Brake system - Check the thickness of the brake pads
- Engine oil and oil filter - Change oil and replace filter
- Service reminder indicator display - Reset display
- Tire repair kit - Check and record the completeness and expiration date (if equipped)

Major Maintenance (Includes All Standard Maintenance Items)

- Body/chassis - Visually inspect for possible paint damage and corrosion, from the inside and outside, with the doors as well as hood and trunk lids open
- Brake system - Check for damage and leaks, condition of brake hoses and the presence of the bleeder caps; Check the thickness of the brake pads.
- Connected box battery - Check state of health with Vehicle Diagnostic Tester in Guided Functions (A4, S4, A4 all-road®, A5, S5, RS 5, A6, A7, A8, Q5, SQ5, Q7, and Q8)
- Convertible top - Lubricate latch mechanism (A5 Cabriolet, S5 Cabriolet only)
- Door hinge (including door stay) and door latch - Lubricate
- Engine cooling system - Check freeze protection and coolant level
- Engine oil and oil filter - Change oil and replace filter
- Engine, transmission, final drive, steering - Visual inspection for leaks and damage
- Exterior lighting - Check front and rear lights, turn signals, cornering lights, reverse lights, license plate lights, and hazard warning lights
- First aid kit - Check and enter expiration date YYYY / MM _____
- Front and rear axle/suspension components - Check dust seals on ball joints and tie rod ends; check for excessive play
- Headlights - Check adjustment
- Hood safety catch - Lubricate (A3, S3, RS 3 only)
- Horn - Check function
- Instrument cluster - Check warning and indicator lights



Major Maintenance (continued)

- Interior lights - Check all interior lights, trunk lights, and glove box compartment illumination
- Plenum chamber and water drain valves: Check for dirt. (A8, Q7, Q8 only)
NOTE: Time spent cleaning of item is a separate charge for service time
- Road test - Perform
- Rollover protection - Check the rollover protection when the convertible top is open (A3 Cabriolet only)
- Safety belts - Check function
- Service reminder indicator display - Reset display
- Spare tire - Check condition and tire inflation pressure, adjust if necessary (if equipped)
- Spoiler - Lubricate rear spoiler (TT, TT Roadster only)
- Sunroof systems - Check function (if equipped)
- Tires - Check condition and tire tread wear. Check and record the tread depth
- Tires - Check tire inflation pressure and adjust if necessary
- Tire repair kit - Check and record the completeness and expiration date (if equipped)
- Underbody - Check for damage and leaks, check the wheel well liners, underbody paneling and all lines are properly mounted
- Warning triangle - Check if present (if equipped)
- Windshield washer and headlight washing system - Add fluid if necessary. Check adjustment and function
- Wiper blades - Check condition and replace if necessary

Additional Maintenance Items		
Work to be completed	Interval	Model Application
<input type="checkbox"/> Air filter - Replace	Every 90,000 kilometres	All vehicles
<input type="checkbox"/> AWD clutch - Change fluid (if equipped)	Every 3 years regardless of mileage	A3 quattro®, S3, RS 3, Q3, TT, TT Roadster, TTS, TT RS Coupe
<input type="checkbox"/> Brake fluid - Change	Every 2 years regardless of mileage	All vehicles
<input type="checkbox"/> Dust and Pollen filter - Replace	Every 30,000 kilometres or 2 years, whichever occurs first	All vehicles
<input type="checkbox"/> Fragrance cartridges - Change (if equipped)	Every 2 years regardless of mileage	A6, A7, A8, Q8 only
<input type="checkbox"/> Panoramic sunroof systems - Check drainage system by fluid check according to Elsa (if equipped)	Every 30,000 kilometres or 2 years, whichever occurs first	All vehicles
<input type="checkbox"/> Rear Axle, quattro® Sport - Oil and ATF fluid changes	Every 90,000 kilometres	RS 5, S6, S7 only
<input type="checkbox"/> Ribbed V-belt compressor drive - Replace	Every 90,000 kilometres	Q7 6-cylinder only
<input type="checkbox"/> Ribbed V-belt starter/generator drive (including tensioner) - Replace	Every 90,000 kilometres	A6 4-cylinder only
<input type="checkbox"/> Spark plugs - Replace	Every 45,000 kilometres or 3 years, whichever occurs first	RS 3, RS 5, TT RS Coupe S6, S7, A8 8-cylinder only
<input type="checkbox"/> Spark plugs - Replace	Every 60,000 kilometres or 6 years, whichever occurs first	S3, TTS, A4, S4, A4 allroad®, A5, S5, A6 4-cylinder, A6 6-cylinder, A7, A8 6-cylinder, Q5, SQ5, Q7 4-cylinder, Q8
<input type="checkbox"/> Spark plugs - Replace	Every 90,000 kilometres or 6 years, whichever occurs first	Q7 6-cylinder



Additional Maintenance Items		
Work to be completed	Interval	Model Application
<input type="checkbox"/> Spark plugs - Replace	Every 120,000 kilometres or 6 years, whichever occurs first	A3, Q3, TT, TT Roadster
<input type="checkbox"/> S-Tronic transmission - Change fluid	Every 60,000 kilometres	RS 3 A4, A4 allroad®, A5, A6 4-cylinder, A6 6-cylinder, A7, Q5, TT RS Coupe only
<input type="checkbox"/> S-tronic transmission - Change fluid	Every 120,000 kilometres	A3, S3, TT, TT Roadster, TTS